


# Use and Care Guide

 
## Roof Exhaust Vent

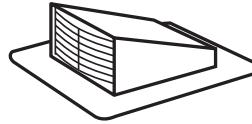


### TOOLS REQUIRED



Hammer



Saw

 

Pencil



Screwdriver

### HARDWARE REQUIRED (NOT INCLUDED)



Nails (4)




Adjustable Clamps (2)

## Installation


### 1 TRACING THE COLLAR

- Locate an area on the roof as close as possible to the exhaust fan. Trace an outline of the collar on to the roof a 1/2 in. larger than the collar.

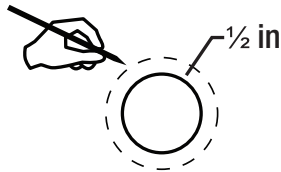


### 2 ATTACHING THE DUCT

- Using the shortest amount of duct possible, use adjustable clamps to attach one end to the roof exhaust collar.

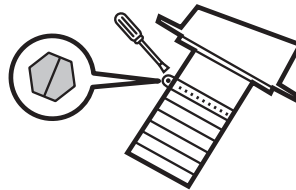


### 3 INSERTING THE ROOF EXHAUST BASE

- Cut the hole and insert the roof exhaust base with the duct attached while ensuring that the outer edge of the base lies under the shingles.

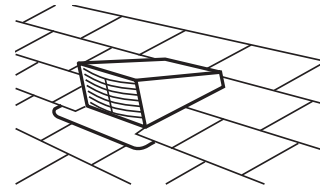


### 4 ATTACHING THE ROOF EXHAUST

- Nail the outer edge of the roof exhaust base to the roof using the pre-punched nail holes and caulk around the perimeter of the base. Butyl caulk is recommended.

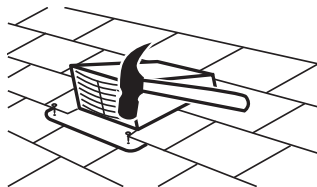

### 5 ATTACHING THE DUCT TO THE EXHAUST FAN

- Secure the other end of the duct to the fan collar using an adjustable clamp.

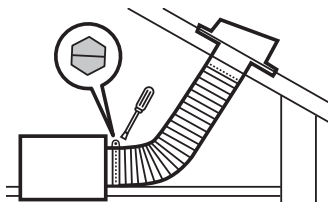

## Warranty

### WHAT IS COVERED

All merchandise is warranted to be free from defects in workmanship and material for one year from the date of purchase. This includes normal wear and performance failure on items. The manufacturer will replace or repair at their option.

### WHAT IS NOT COVERED

This warranty only covers normal wear and performance failure. It does not cover any malfunction, performance failure, or defect arising from the misuse, abuse, neglect, or modification of the product. Any damage or malfunction inflicted upon the product by the user or other external sources, or any failure to comply with the warnings and instructions, is not covered.

For further assistance visit [www.DundasJafine.com](http://www.DundasJafine.com).