## Return Air / Service Wall Panel

For Air Handler Models TMM4, TMM5

## Return Air / Service Wall Panel - BAYTMMWALLPNL1

## **FEATURES**


- FRAMED, LOUVERED PANEL FOR WALL MOUNT APPLICATIONS
- BAYTMMWALLPNL1 INCLUDES ACCESS PANEL FRAME AND ACCESS PANEL
- WHITE FINISH
- ACCESS PANEL FRAME MOUNTS EASILY TO WALL


## Installation Instructions

- 1. Ensure there is a structural frame to mount the sheet metal frame. See the frame rough opening dimensions.
- 2. Secure the metal frame to the wall using the (8) #10-11/4" screws provided. The frame should be oriented with the clips at the top of the frame.

NOTE: Do not use the 1  $\frac{1}{4}$  " long screws in the holes with clips.

- 3. Place the tabs of the louvered panel into the bottom slots of the frame.
- 4. Secure the louvered panel to the frame using the (2) #10- 3/4" white screws provided.

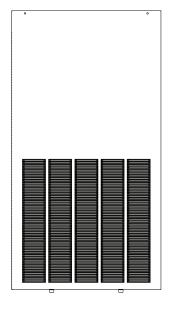

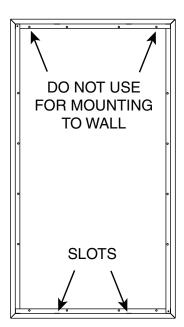

**BAYTMMWALLPNL1** 

All Dimensions in Inches	Frame Outer Dimensions		Frame Rough Opening Dimensions		Air Handler Models	Style
	W	Н	W	Н		
BAYTMMWALLPNL1	25.81	46.81	22.81	43.81	TMM4 TMM5	Louvered