

90TJ SERIES Models with Input Rates from 45,000 to 120,000 BTU/HR [13.19 to 35.17 kW]

(All Models 90% A.F.U.E.† or Above)

Manufactured by













90 HIGH EFFICIENCY DOWNFLOW/ HORIZONTAL GAS FURNACES

The WeatherKing[®] 90 High Efficiency line of downflow/ horizontal gas furnaces are designed for utility rooms, closets, alcoves, attics or crawl spaces. The 90TJ is shipped in the downflow configuration and is easily converted for horizontal **left-hand** airflow applications.


The design is certified by the CSA.

Features

- Low profile "34 inch" design is lighter and easier to handle and leaves room for optional accessories.
- Top electrical connections, left or right gas and condensate drainage connections on downflow models.
- Condensate drain for horizontal application provided standard.
- Integrated control board manages all operational functions and provides hookups for an electronic air cleaner.
- A slow-opening gas valve and a specially designed inducer system make it one of the quietest furnaces on the market today.
- Textured galvanized steel cabinet with matching painted access doors.
- Optional indoor or outdoor combustion air.
- Control board diagnostics.

A variety of cooling coils and plenums designed to use with WeatherKing 90 gas furnaces are available as optional accessories for air conditioning models.

tA.F.U.E. (Annual Fuel Utilization Efficiency) calculated in accordance with Department of Energy test procedures.

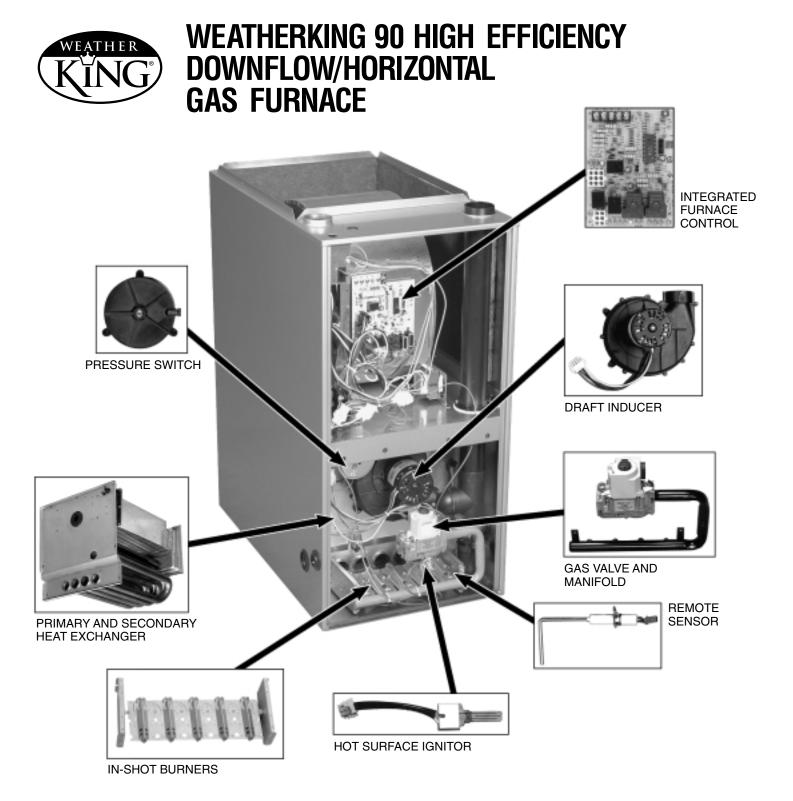

STANDARD EQUIPMENT

Completely assembled and wired; heat exchanger; primary: 409 stainless steel, secondary: 29-4C stainless steel; induced draft; pressure switch; redundant main gas control; blower compartment door safety switch; solid state time on/off blower control; limit controls; manual shut-off valve; 100% safety lock out; cool fan off delay; field selectable heat fan off delay; one hour automatic retry; self-test diagnostics; control diagnostics; electronic air cleaner connections; pressure regulator for natural and L.P. (propane) gases; transformer; direct drive, multi-speed blower motor. (Please note: a thermostat is not included as standard equipment.)

OPTIONAL EQUIPMENT

(See Accessory Page)

All models can be converted by a qualified distributor or local service dealer to use L.P. (propane) gas without changing burners. Factory approved kits must be used to convert from natural to L.P. (propane) gas and may be ordered as optional accessories from a parts distributor.

For L.P. (propane) operation, refer to Conversion Kit Index Form.

WARNING THIS FURNACE IS NOT APPROVED OR RECOMMENDED FOR USE IN MOBILE HOMES

FOR I

BEFORE PURCHASING THIS APPLIANCE, READ IMPORTANT ENERGY COST AND EFFICIENCY INFORMATION AVAILABLE FROM YOUR RETAILER.

PHYSICAL DATA AND SPECIFICATIONS

MODEL NUMBERS 90TJ- SERIES	90TJ04EES01	90TJ06EES01	90TJ07EES01	90TJ07EFS01	90TJ09EJS01	90TJ10EGS01	90TJEHS01
INPUT-BTU/HR [kW] ①	45,000 [13.19]	60,000 [17.58]	75,000 [21.98]	75,000 [21.98]	90,000 [26.37]	105,000 [30.77]	120,000 [35.17]
HEATING CAPACITY BTU/HR [kW]	42,000 [12.31]	56,000 [16.41]	70,000 [20.51]	70,000 [20.51]	84,000 [24.61]	97,000 [28.43]	113,000 [33.12]
HIGH ALTITUDE INPUT [kW] ②	40,500 [11.87]	54,000 [15.83]	67,500 [19.78]	67,500 [19.78]	81,000 [23.73]	94,500 [27.70]	108,000 [31.65]
HIGH ALTITUDE OUTPUT CAPACITY [kW] ②	37,800 [11.07]	50,400 [14.77]	63,000 [18.46]	63,000 [18.46]	76,000 [22.27]	87,500 [25.64]	100,000 [29.31]
BLOWER (D x W) [mm]	11 x 7 [279 x 178]	11 x 7 [279 x 178]	11 x 7 [279 x 178]	12 x 7 [305 x 178]	12 x 11 [305 x 279]	12 x 11 [305 x 279]	11 x 10 [279 x 254]
MOTOR H.P. [W] SPEEDS-TYPE	1/2 [373] 4-PSC	1/2 [373] 3-PSC	1/2 [373] 3-PSC	3/4 [559] 3-PSC	1/2 [373] 3-PSC	3/4 [559] 3-PSC	3/4 [559] 3-PSC
MOTOR FULL LOAD AMPS	6.8	6.8	6.8	9.5	8.0	9.5	9.5
HEATING SPEED	Med-Low	Low	Med	Low	Med	Low	Low
COOLING SPEED	High						
HEAT EXT. STATIC PRESSURE (IN. W.C.) [kPA]	.10 [.025]	.12 [.029]	.12 [.029]	.12 [.029]	.15 [.037]	.20 [.049]	.20 [.049]
RATED EXT. STATIC PRESSURE (IN. W.C.) [kPA]	.50 [.12]	.50 [.12]	.50 [.12]	.50 [.12]	.50 [.12]	.50 [.12]	.50 [.12]
HEATING C.F.M. @ .2" W.C. E.S.P. [L/s]	890 [420]	885 [418]	1060 [500]	1275 [602]	1400 [661]	1425 [673]	1565 [739]
COOLING C.F.M. @ .5" W.C. E.S.P. [L/s]	1220 [576]	1180 [557]	1150 [543]	1625 [767]	1570 [740]	1820 [859]	2040 [963]
TEMPERATURE RISE RANGE °F [°C]	30-60 [16.7-33.3]	40-70 [22.2-38.9]	45-75 [25-41.7]	35-65 [19.4-36.1]	35-65 [19.4-36.1]	50-80 [27.8-44.4]	50-80 [27.8-44.4]
STANDARD FILTER [mm]	(2) 12" x 20" [305 x 508]	(2) 14" x 20" [609 x 508]					
APPROX. SHIPPING WEIGHT (LBS.) [kG]	111 [50.3]	117 [53.1]	123 [55.8]	123 [55.8]	148 [67.1]	152 [68.9]	160 [72.6]
AFUE 3	92.0%	92.4%	92.0%	92.3%	92.4%	92.0%	92.1%
CALIFORNIA SEASONAL EFFICIENCY ③	84.35%	86.46%	89.96%	85.00%	86.40%	87.02%	87.37%

NOTES: All models are 115V, 60HZ, 1Ø. Gas connection size for all models is 1/2" [13 mm] N.P.T.

① See Conversion Kit Index Form for high altitude derate.


© Canadian installations only.
③ In accordance with D.O.E. test procedures.

MODEL IDENTIFICATION

<u>90</u>	ТJ	<u>04</u>	Ē	Ē	S	<u>01</u>
Efficiency 90 = 90 Plus	Model Designation	Heating Input BTU/HR [kW] 04 = 45,000 [13] 06 = 60,000 [18] 07 = 75,000 [22] 09 = 90,000 [26] 10 = 105,000 [31] 12 = 120,000 [35]	Ignition E = Electric Ignition	Variations Blower Designation [mm] Motor H.P E = Standard Cabinet 11 × 7 [279 × 178] 1/2 H.P 4 Speed F = Standard Cabinet 12 × 7 [305 × 178] 3/4 H.P 3 Speed G = Standard Cabinet 12 × 11 [305 × 279] 3/4 H.P 3 Speed H = Standard Cabinet 11 × 10 [279 × 254] 3/4 H.P 3 Speed J = Standard Cabinet 12 × 11 [305 × 279] 1/2 H.P 3 Speed	Fuel Code S = 90 Plus Natural Gas	W E A T H E R K I N G

[] Designates Metric Conversions

DOWNFLOW MODELS

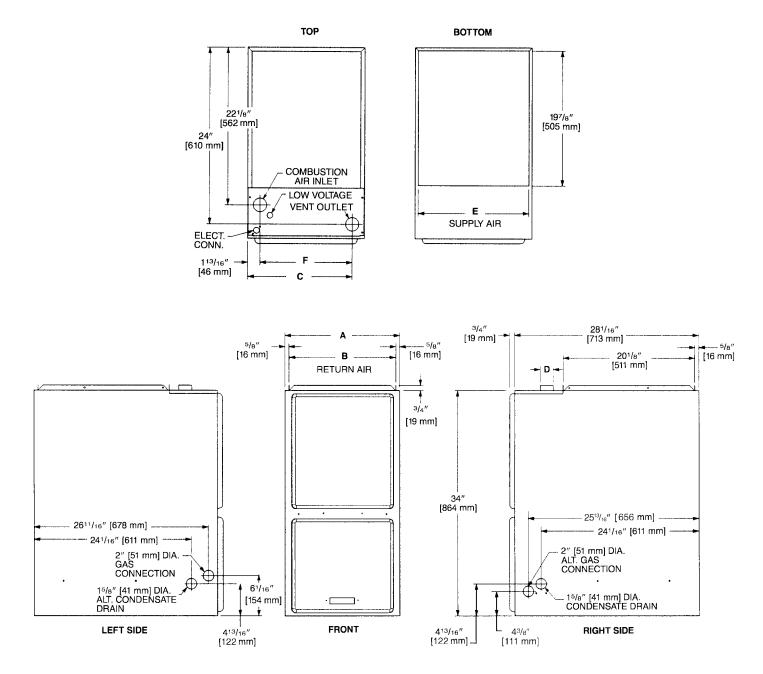


MODEL							LEFT	MINIMUM CLEARANCE (IN.) [mm]					SHIP
90TJ	A	В	C	D	E	F	SIDE	RIGHT SIDE	BACK	ТОР	FRONT	VENT	WGTS. [kg]
04	171/2 [445]	16 ³ /8 [416]	155/8 [397]	2 [51]	165/8 [422]	137/8 [352]	0	0	0	1 [25]	2 [51]	0	111 [50]
06, 07EE	171/2 [445]	16 ³ /8 [416]	155/8 [397]	2 [51]	165/8 [422]	137/8 [352]	0	0	0	1 [25]	2 [51]	0	117 [53]
07EF	21 [533]	19 ⁷ /8 [505]	19 ³ /16 [486]	2 [51]	201/8 [511]	173/8 [441]	0	0	0	1 [25]	2 [51]	0	123 [56]
09	21 [533]	19 ²⁷ /32 [504]	19 ³ /16 [486]	2 [51]	201/8 [511]	173/8 [441]	0	0	0	1 [25]	2 [51]	0	148 [67]
10	21 [533]	19 ⁷ /8 [505]	19 ³ /16 [486]	2 [51]	20 ¹ /8 [511]	17 ³ /8 [441]	0	0	0	1 [25]	2 [51]	0	152 [69]
12	241/2 [622]	23 ³ /8 [594]	225/8 [575]	2 [51]	235/8 [600]	207/8 [530]	0	0	0	1 [25]	2 [51]	0	160 [73]

IMPORTANT NOTE: Horizontal furnace may be installed for horizontal left hand air supply ONLY. The condensate trap provided for horizontal application must be installed in the field beneath the unit as directed in the furnace Installation & Operating Instructions.

[] Designates Metric Conversions

HORIZONTAL MODELS

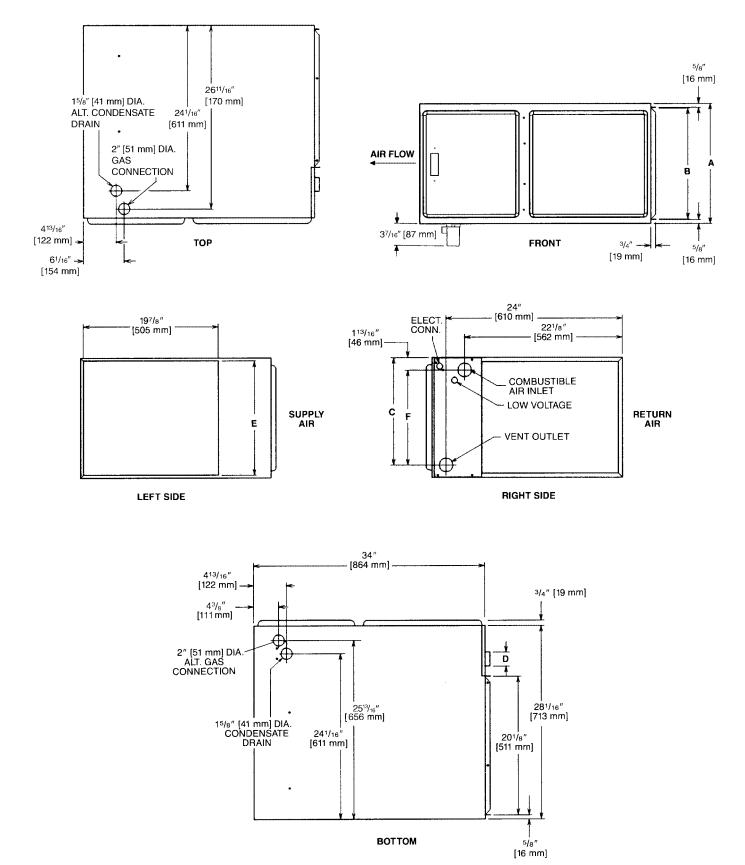

IMPORTANT NOTE: Horizontal furnace may be installed for horizontal left hand air supply ONLY. The condensate trap provided for horizontal application must be installed in the field beneath the unit as directed in the furnace Installation & Operating Instructions.

BLOWER PERFORMANCE DATA—90TJ MODELS

MODEL 90TJ	BLOWER SIZE	MOTOR H.P.	BLOWER SPEED	CFM [L/s] AIR DELIVERY EXTERNAL STATIC PRESSURE INCHES WATER COLUMN [kPa]					(Pa]	
5015	IN. [mm]	[W]	SILLD	0.1 [.02]	0.2 [.05]	0.3 [.07]	0.4 [.10]	0.5 [.12]	0.6 [.15]	0.7 [.17]
04EES01	11 x 7 [279 x 178]	1/2 [373]	LOW MED-LO MED-HI HIGH	820 [387] 930 [439] 1150 [543] 1414 [667]	790 [373] 890 [420] 1120 [528] 1365 [644]	760 [359] 850 [401] 1090 [514] 1320 [622]	725 [342] 815 [384] 1045 [493] 1270 [599]	690 [326] 785 [370] 1002 [473] 1220 [576]	650 [306] 750 [354] 950 [448] 1165 [550]	610 [288] 720 [340] 900 [425] 1115 [526]
06EES01	11 x 7 [279 x 178]	1/2 [373]	LOW MED HIGH	910 [429] 1115 [526] 1365 [644]	885 [418] 1080 [510] 1315 [620]	860 [406] 1045 [493] 1270 [600]	815 [384] 1005 [474] 1225 [578]	770 [363] 965 [455] 1180 [557]	725 [342] 920 [434] 1125 [491]	680 [321] 875 [413] 1070 [505]
07EES01	11 x 7 [279 x 178]	1/2 [373]	LOW MED HIGH	890 [420] 1100 [519] 1340 [632]	860 [406] 1060 [500] 1295 [611]	835 [394] 1025 [484] 1250 [590]	790 [373] 980 [462] 1200 [566]	750 [354] 940 [443] 1150 [543]	705 [332] 890 [420] 1090 [514]	660 [311] 845 [399] 1025 [484]
07EFS01	12 x 7 [305 x 178]	3/4 [559]	LOW MED HIGH	1290 [609] 1480 [698] 1705 [805]	1275 [602] 1435 [677] 1665 [786]	1260 [595] 1415 [668] 1615 [762]	1220 [576] 1390 [656] 1570 [741]	1195 [564] 1370 [647] 1540 [727]	1170 [552] 1300 [614] 1475 [696]	1140 [538] 1255 [592] 1400 [661]
09EJS01	12 x 11 [305 x 279]	1/2 [373]	LOW MED HIGH	1155 [545] 1420 [670] 1605 [757]	1125 [531] 1400 [661] 1575 [743]	1100 [519] 1380 [651] 1550 [732]	1080 [510] 1365 [644] 1560 [736]	1060 [500] 1350 [637] 1570 [740]	1000 [472] 1260 [594] 1480 [698]	940 [443] 1175 [554] 1395 [656]
10EGS01	12 x 11 [305 x 279]	3/4 [559]	LOW MED HIGH	1460 [689] 1680 [793] 2055 [970]	1425 [672] 1645 [776] 2000 [944]	1390 [656] 1615 [762] 1940 [915]	1375 [649] 1585 [748] 1880 [887]	1360 [642] 1560 [736] 1820 [859]	1280 [604] 1490 [703] 1745 [823]	1200 [566] 1420 [670] 1675 [790]
12EHS01	11 x 10 [279 x 245]	3/4 [559]	LOW MED HIGH	1590 [750] 1840 [868] 2315 [1093]	1565 [738] 1820 [860] 2250 [1062]	1540 [727] 1800 [850] 2185 [1031]	1505 [710] 1750 [826] 2110 [996]	1475 [696] 1700 [802] 2040 [963]	1425 [672] 1645 [776] 1965 [927]	1375 [649] 1590 [750] 1890 [892]

[] Designates Metric Conversions

ACCESSORIES—DOWNFLOW

VENT TERMINATION KITS CONCENTRIC: Horizontal/Vertical = RXGY-E03 HORIZONTAL TWO PIPE: RXGY-D02. RXGY-D03. RXGY-D04

CONDENSATE PUMP KIT: RXGY-B01 NEUTRALIZER KIT: RXGY-A01

FOSSIL FUEL KIT: RXPF-F01, RXPF-F02 (TVA)

PLENUM DATA FOR "A" COILS

Plenum adapters are required in some applications when plenum and furnace size do not match.

FURNACE WIDTH IN. [mm]	PLENUM WIDTH IN. [mm]	PLENUM ADAPTER DOWNFLOW	COIL Plenum
171/2 [445]	16 ¹ /4 [413]	RXAA-C186	RXAL-B16BU
171/2 [445]	201/4 [514]	RXAA-C173	RXAL-B20BU
171/2 [445]	215/8 [549]	RXAA-C187	RXAL-B21BU
171/2 [445]	251/4 [641]	RXAA-C174	RXAL-B25BU
21 [533]	251/4 [641]	RXAA-C175	RXAL-B25BU
21 [533]	221/4 [565]	RXAA-C176	RXAL-B22BU
21 [533]	215/8 [549]	RXAA-C188	RXAL-B21BU
241/2 [622]	251/4 [641]	RXAA-C177	RXAL-B25BU
241/2 [622]	215/8 [549]	RXAA-C187	RXAL-B21BU

Note: See Form Number C66-207 for MultiFlex® coil data.

COMBUSTIBLE FLOOR BASE: RXGC-B17, RXGC-B21, RXGC-B24 EXTERNAL TOP MOUNT FILTER RACK: RXGF-CC INTERNAL FILTER RACK FOR AIR RETURN DUCT: RXGF-DB*

Each order contains (1) one box of 10 filter racks supplied without filters. *Filters available through PROSTOCK[®].

FILTER RACK F	LTER SIZES [®] INCHES [mm]
MODEL 90TJ-	RXGF-CC
04EE	(2) 12 × 20 [305 × 508]
06EE	(2) 12 × 20 [305 × 508]
07EE/07EF	(2) 12 × 20 [305 × 508]
09EJ	(2) 12 × 20 [305 × 508]
10EG	(2) 12 x 20 [305 x 508]
12EH	(2) 14 x 20 [305 x 508]

*Filter racks are shipped without filters.

RXGP-F03

TWINNING KIT—is for use with WeatherKing 90 Gas Furnaces for parallel operation requirements.

FOR HIGH ALTITUDES:

*HIGH ALTITUDE KIT:
F04-105 KBTU/H
F06-45/60/90 KBTU/H
F05-120 KBTU/H
F07-75 KBTU/H

*For installations over 5000 ft.

OPTION CODE FOR HIGH ALTITUDE: U.S. & Canada - 278

NOTE: High altitude kits and options do NOT include additional burner orifices. If a burner orifice change is necessary, they must be ordered through PROSTOCK[®]. See Installation Instructions for more information.

Option – 278 furnaces are shipped with #51 DMS orifices installed. This is one drill size smaller than standard furnaces to account for expected average elevations and heating values typically seen in these areas.

CAUTION: Always follow National Fuel Gas Code (NFGC) guidelines when converting furnaces for high altitudes.

For all installations above 2000 ft. (including all option – 278 models), the burner orifice size needs to be recalculated and verified. A burner orifice change may still be required. See Installation Instructions for more information.

NOTE: For Canadian installations only, an optional derate (manifold gas pressure reduction) method may be used to adjust the furnace for altitude. See Installation Instructions for more information. This optional method may **NOT** be used for U.S. installations.

[] Designates Metric Conversions

GENERAL TERMS OF LIMITED WARRANTY

ICECOSM will furnish a replacement for any part of this product which fails in normal use and service within the applicable period stated, in accordance with the terms of the limited warranty.

For Complete Details of the Limited Warranty, Including Applicable Terms and Conditions, See Your Local Installer or visit <u>www.ICECOhvac.com.</u>

Primary and Secondary Heat Exchanger ...Twenty (20) Years Any Other Part.....Five (5) Years

Before proceeding with installation, refer to installation instructions packaged with each model, as well as complying with all Federal, State, Provincial, and Local codes, regulations, and practices. **Manufactured By ICECO**





"In keeping with its policy of continuous progress and product improvement, ICECO reserves the right to make changes without notice." PRINTED IN U.S.A. 3-06 DC FORM NO. G66-480 REV. 7 Supersedes Form No. G66-480 ReV. 6