


INSTALLATION INSTRUCTIONS FOR RCQC COILS

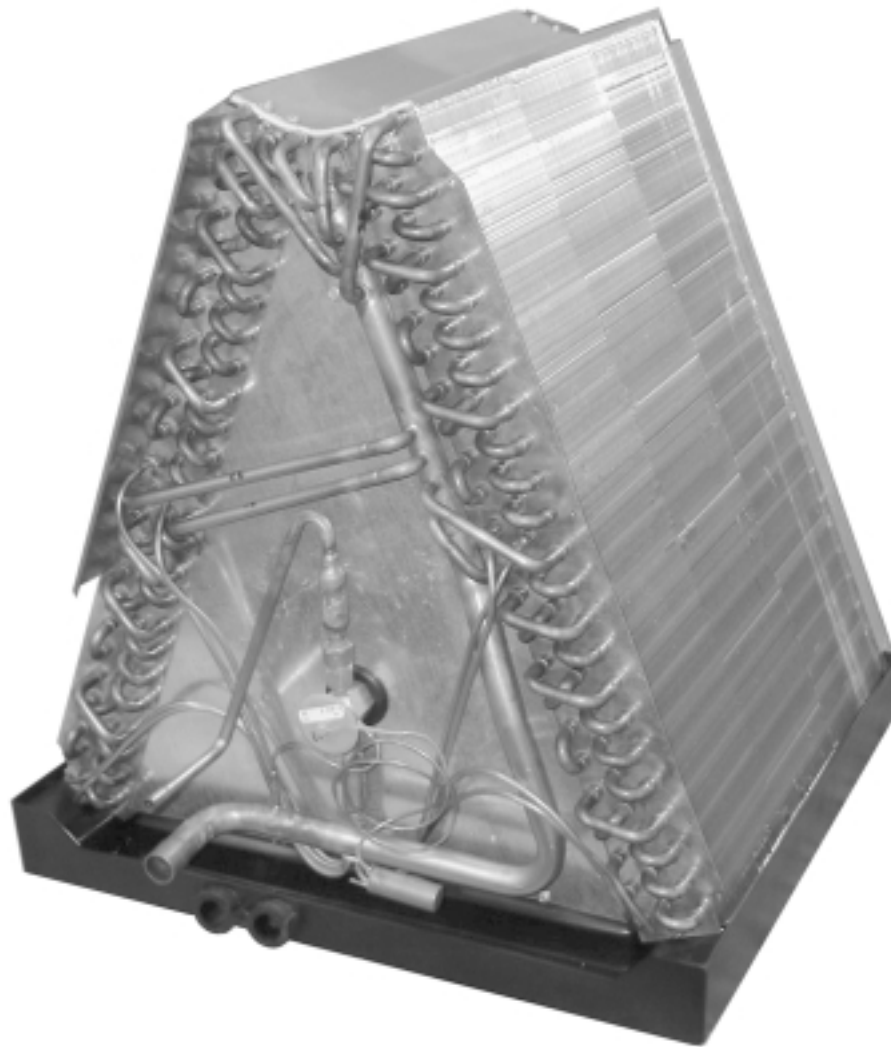

RECOGNIZE THIS SYMBOL AS AN INDICATION OF IMPORTANT SAFETY INFORMATION!

▲ WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED, LICENSED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS UNIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.




ISO 9002

DO NOT DESTROY THIS MANUAL

PLEASE READ CAREFULLY AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE BY A SERVICEMAN


FIGURE 1
MODEL NUMBER EXPLANATION

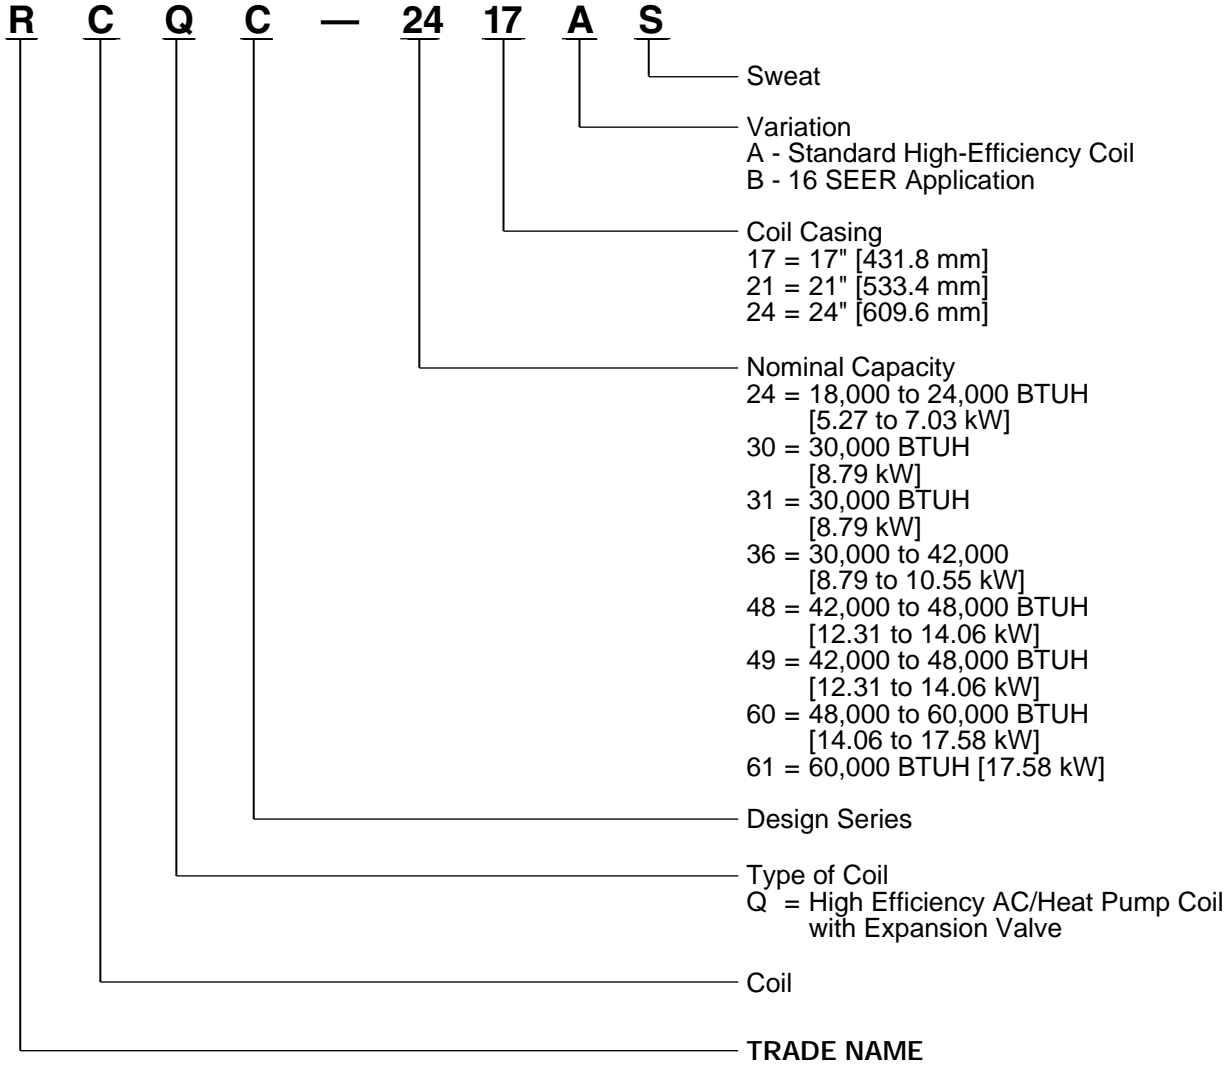

CONTENTS

Model Number Explanation	2
Unit Specifications	4
Coil Specifications and Application	5
INSPECTION	5
GENERAL INFORMATION	5
Codes/Regulations	5
Replacement Parts	5
INSTALLATION	6
Vertical Upflow and Horizontal Left	8
Vertical Downflow	8
Horizontal Left and Right	8
Refrigerant Connections	9
TXV Sensing Bulb	9
Condensate Drain Tubing	9
MAINTENANCE	12
Air Filter	12
Indoor Coil - Drain Pan - Drain Line	12
ACCESSORIES	12
Plenum Adapter Accessory	12

**FIGURE 2
UNIT SPECIFICATIONS**

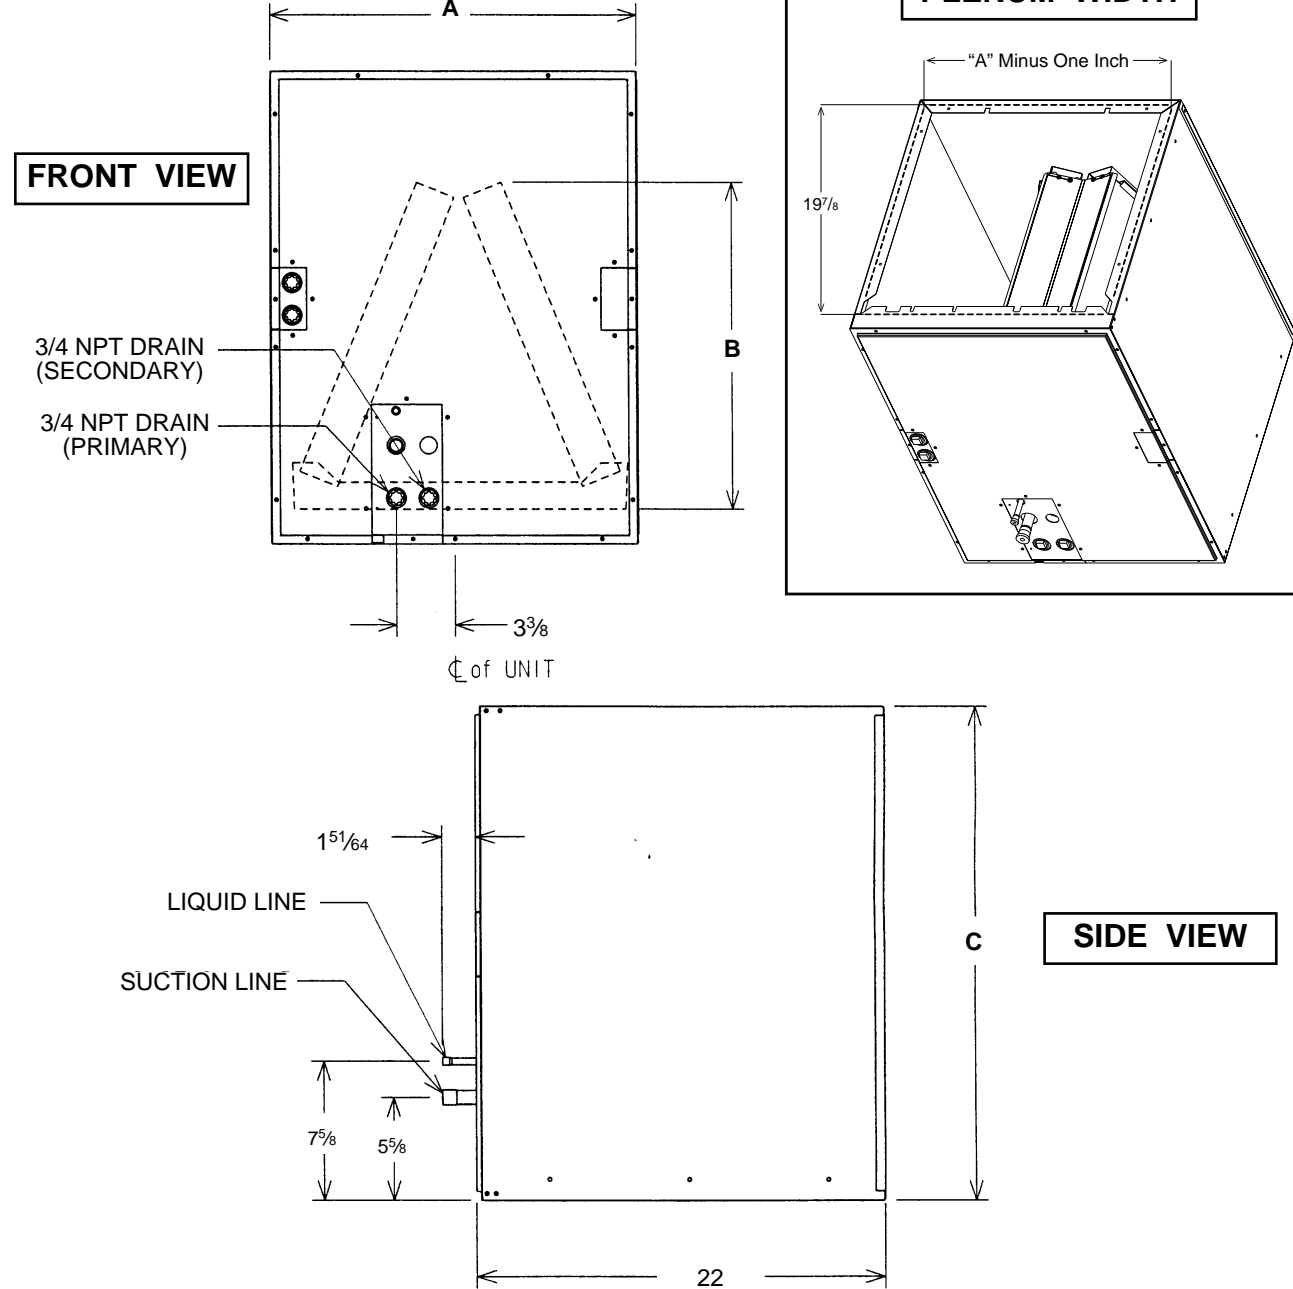

DIMENSIONS AND WEIGHTS DATA

Coil Model Number	Connections		Dimensions (in.) [mm] – Weight (lbs.) [Kg]				
	Sweat (in.) [mm]		A	B	C	Coil Weight (lbs.) [Kg]	Shipping Weight (lbs.) [Kg]
	Liquid I.D.	Suction I.D.					
RCQC-2417 AS	3/8 [9.53]	3/4 [19.05]	17-1/2 [445]	17-3/4 [451]	28 [711]	57 [26]	65 [29]
RCQC-3121 AS	3/8 [9.53]	7/8 [22.23]	21 [533]	24-3/4 [629]	28 [711]	74 [34]	83 [38]
RCQC-3124 AS	3/8 [9.53]	7/8 [22.23]	24-1/2 [622]	24-3/4 [629]	28 [711]	80 [36]	90 [41]
RCQC-3617 AS	3/8 [9.53]	3/4 [19.05]	17-1/2 [445]	19-7/8 [505]	28 [711]	59 [27]	67 [30]
RCQC-3621 AS	3/8 [9.53]	3/4 [19.05]	21 [533]	19 [483]	28 [711]	65 [29]	74 [34]
RCQC-4821 AS	3/8 [9.53]	7/8 [22.23]	21 [533]	24-3/4 [629]	28 [711]	74 [34]	83 [38]
RCQC-4824 AS	3/8 [9.53]	7/8 [22.23]	24-1/2 [622]	24-3/4 [629]	28 [711]	80 [36]	90 [41]
RCQC-6024 AS	3/8 [9.53]	7/8 [22.23]	24-1/2 [622]	24-3/4 [629]	28 [711]	80 [36]	90 [41]
RCQC-4921 AS	3/8 [9.53]	7/8 [22.23]	21 [533]	24-3/4 [629]	28 [711]	83 [38]	93 [42]
RCQC-4924 AS	3/8 [9.53]	7/8 [22.23]	24-1/2 [622]	24-3/4 [629]	28 [711]	84 [38]	94 [43]
RCQC-6124 AS	3/8 [9.53]	7/8 [22.23]	24-1/2 [622]	30-15/16 [786]	34-3/8 [873]	104 [47]	115 [52]
RCQC-2417 BS	3/8 [9.53]	3/4 [19.05]	17-1/2 [445]	19-7/8 [505]	28 [711]	59 [27]	67 [30]
RCQC-3021 BS	3/8 [9.53]	7/8 [22.23]	21 [533]	24-3/4 [629]	28 [711]	74 [34]	83 [38]
RCQC-3624 BS	3/8 [9.53]	7/8 [22.23]	24-1/2 [622]	24-3/4 [629]	28 [711]	80 [36]	90 [41]

TABLE 1
COIL SPECIFICATIONS / AIRFLOW PRESSURE DROP

Model Number RCQC-	Type Air Flow ①	Approx. Design Air Flow CFM [L/s] Range	Face Area Sq. Ft. [m ²]	Fins-in. Rows Deep	Static Pressure Drop Through Wet Cooling Coil [kPa] (Inches H ₂ O) CFM [L/s]											
					600 [283]	700 [330]	800 [378]	900 [425]	1000 [472]	1100 [519]	1200 [566]	1300 [614]	1400 [661]	1500 [708]	1600 [755]	1700 [802]
STANDARD HORIZONTAL COOLING COILS																
2417AS	U-H	600/1000 [283/472]	3.89 [0.36]	14/3	.10 [.025]	.14 [.035]	.19 [.047]	.23 [.057]	.27 [.067]							
3121AS	U-H	1000/1200 [302/378]	5.83 [0.54]	14/3					.14 [.035]	.17 [.042]	.19 [.047]					
3124AS	U-H	1000/1200 [302/378]	5.83 [0.54]	14/3					.11 [.027]	.13 [.032]	.15 [.037]					
3617AS	U-H	800/1200 [378/566]	4.38 [0.41]	14/3		.14 [.035]	.17 [.042]	.21 [.052]	.25 [.062]	.29 [.072]						
3621AS	U-H	800/1400 [378/661]	4.38 [0.42]	14/3		.08 [.020]	.10 [.025]	.13 [.032]	.16 [.040]	.18 [.045]	.21 [.052]	.24 [.060]				
4821AS	U-H	1200/1600 [566/755]	5.83 [0.54]	14/3				.14 [.035]	.17 [.042]	.19 [.047]	.22 [.055]	.25 [.062]	.29 [.072]	.32 [.080]		
4824AS	U-H	1200/1800 [566/850]	5.83 [0.54]	14/3				.11 [.027]	.13 [.032]	.15 [.037]	.17 [.042]	.19 [.047]	.23 [.057]	.25 [.062]	.28 [.070]	.31 [.077]
4921AS	U-H	1200/1400 [566/661]	5.83 [0.54]	13/4						.23 [.057]	.26 [.065]	.30 [.075]				
4924AS	U-H	1000/1600 [477/555]	5.83 [0.54]	13/4						.15 [.037]	.18 [.045]	.21 [.052]	.23 [.057]	.27 [.067]	.30 [.075]	
6024AS	U-H	1500/1900 [708/897]	5.83 [0.54]	14/3						.17 [.042]	.19 [.047]	.22 [.055]	.24 [.060]	.27 [.067]	.29 [.072]	.32 [.080]
6124AS	U-H	1400/1700 [661/802]	7.29 [0.68]	14/4							.21 [.052]	.23 [.057]	.27 [.067]	.30 [.075]		
HIGH EFFICIENCY COOLING COILS																
2417BS	U-H	640/800 [302/378]	4.38 [0.41]	14/3	0.06 [.015]	0.10 [.024]	0.14 [.035]	0.17 [.042]								
3021BS	U-H	800/1000 [378/472]	5.83 [0.54]	14/3			0.08 [.019]	0.11 [.026]	0.14 [.035]							
3624BS	U-H	960/1275 [453/602]	5.83 [0.54]	14/3				0.11 [.027]	0.13 [.032]	0.15 [.037]	0.17 [.042]					

①H = Horizontal airflow, U = Upflow

TABLE 2
COIL APPLICATION (NO DOWNFLOW APPLICATIONS)

Coil Model RCQC-	Type Air Flow *	Furnace Width (In.) (mm)		Plenum Adapter Upflow
		Oil	Gas	
2417AS	U-H	Upflow Only	17 1/2 [444]	N/A
	U-H		14 [356]	RXBA-AC
2417BS 3617AS	U-H		17 1/2 [444]	N/A
	U-H		14 [356]	RXBA-AC
3621AS	U	21 [533]		N/A
	U-H		21 [533]	N/A
	U-H		17 1/2 [444]	RXBA-AC
3021BS, 3121AS 4821AS, 4921AS	U-H		21 [533]	N/A
	U-H		17 1/2 [444]	RXBA-AC
3124AS, 3624BS 4824AS, 4924AS	U-H	24 1/2 [622]		N/A
	U-H		24 1/2 [622]	N/A
	U-H		21 [533]	RXBA-AC
6024AS 6124AS	U-H			RXBA-AE
	U-H		24 1/2 [622]	N/A

NOTES:

* U = UPFLOW
H = HORIZONTAL

I. INSPECTION

WARNING

PROPOSITION 65: THIS APPLIANCE CONTAINS FIBERGLASS INSULATION. RESPIRABLE PARTICLES OF FIBERGLASS ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER.

All Rheem products meet current Federal OSHA Guidelines for safety. California Proposition 65 warnings are required for certain products, which are not covered by the OSHA standards.

California's Proposition 65 requires warnings for products sold in California that contain or produce any of over 600 listed chemicals known to the State of California to cause cancer or birth defects such as fiberglass insulation, lead in brass, and combustion products from natural gas.

All "new equipment" shipped for sale in California will have labels stating that the product contains and/or produces Proposition 65 chemicals. Although we have not changed our processes, having the same label on all our products facilitates manufacturing and shipping. We cannot always know "when, or if" products will be sold in the California market.

You may receive inquiries from customers about chemicals found in, or produced by, some of our heating and air-conditioning equipment, or found in natural gas used with some of our products. Listed below are those chemicals and substances commonly associated with similar equipment in our industry and other manufacturers.

- Glass Wool (Fiberglass) Insulation
- Carbon Monoxide (CO).
- Formaldehyde
- Benzene

More details are available at the websites for OSHA (Occupational Safety and Health Administration), at www.osha.gov and the State of California's OEHHA (Office of Environmental Health Hazard Assessment), at www.oehha.org. Consumer education is important since the chemicals and substances on the list are found in our daily lives. Most consumers are aware that products present safety and health risks, when improperly used, handled and maintained.

Immediately upon receipt, all cartons, and contents should be inspected for transit damage. Units with damaged cartons should be opened immediately. If damage is found, it should be noted on the delivery papers and a damage claim filed with the last carrier.

- After unit has been delivered to job site, remove carton taking care not to damage unit.
- Check the unit rating plate to be sure equipment matches what is required for the job specification.
- Read the entire instructions before starting the installation. This is particularly important if this is the first installation for this specific model series.
- Many installation steps done prior to setting the unit in place can save time and simplify the installation.

II. GENERAL CODES/REGULATIONS

Units should be installed in accordance with any local code which may apply and the national codes. Latest editions are available from: "National Fire Protection Association, Inc., Batterymarch Park, Quincy, MA 02269." These publications are:

- *ANSI/NFPA Latest Edition (NEC) National Electrical Code.*
- *NFPA90A Installation of Air conditioning and Ventilating Systems.*
- *NFPA90B Installation of Warm Air Heating and Air Conditioning Systems.*

REPLACEMENT PARTS

Any replacement part must be the same as or an approved alternate to the original part supplied. The manufacturer will not be responsible for replacement parts not designed to physically fit or operate within the design parameters the original parts were selected for.

When ordering replacement parts, it is necessary to order by part number and include the complete model number and serial number from the unit rating plate. (See parts list for unit component part numbers.)

III. INSTALLATION

COIL INSTALLATION

⚠ CAUTION

When installing a unit with cooling coil over a finished ceiling and/or living space, installation of a secondary field fabricated drain pan under the entire unit, to avoid damage to ceiling, is recommended.

RCQC- coils can be applied in various upflow and horizontal flow configurations (see Figure 3. Refer to Table 2 for approved applications).

⚠ CAUTION

For horizontal applications, the horizontal drain pan must be located under the indoor coil. Failure to place the pan under the coil can result in property damage.

FIGURE 3
FACTORY SHIPPED COIL INSTALLATION



HORIZONTAL LEFT



UPFLOW

VERTICAL UPFLOW AND HORIZONTAL LEFT INSTALLATION

(SEE FIGURE 3)

1. For vertical or horizontal left installation, no modification from current factory configuration is required.
2. Seal the gap around the refrigerant lines with the permagum provided in the parts bag.

NOTE: The coil is shipped from factory for the vertical or horizontal left position. The coil must be converted for use in horizontal right position.

VERTICAL DOWNFLOW

IMPORTANT: The (-)CQC-series coil is not approved for vertical downflow applications.

CAUTION

Severe condensate blowoff can occur if the (-)CQC coil is applied in a vertical downflow application.

HORIZONTAL RIGHT INSTALLATION

(REFER TO FIGURE 4 FOR THE FOLLOWING INSTRUCTIONS)

THE FOLLOWING COIL MODIFICATIONS MUST BE IMPLEMENTED:

1. Remove the entire front panel assembly by removing all necessary screws.
2. Remove the refrigerant access panel from the front panel and reinstall it with the right-hand side mounting holes (see Figure 5).
3. Switch the positions of the left condensate plate and right blank plate on the front panel.
4. Slide the coil outside of the coil box.
5. Remove the vertical bracket on the right side of the vertical drain pan (see Figure 6).
6. Remove the horizontal drain pan and place it on the right side of the coil (see Figure 7).
7. Re-install the vertical bracket on the left side of the vertical drain pan.

FIGURE 4
HORIZONTAL RIGHT INSTALLATION



8. Remove all screws from the top of the air stop (see Figure 8).
9. Remove the center drain trough by removing the screw located at the back triangular plate (see Figure 8). Ensure sealer stays on the bottom of the drain trough.
10. Rotate the center drain trough 180°, front to back (see Figure 9).

NOTE: Failure to properly rotate the center drain trough may permit condensate water to blow off the cooling coil.
11. Apply permagum supplied in parts bag to underside of drain trough (see Figure 10) in two corners.
12. Re-install the center drain trough and secure it by tightening the screw through the hole located on the front triangular plate. Reinstall the top air stop.
13. Replace the coil assembly into the coil box (be sure to align the vertical brackets properly with the side rail), taking care not to tear insulation.
14. Locate TXV sensing bulb and slide it through the universal grommet on the access panel.
15. Reinstall front panel.
16. Seal the gap around the refrigerant lines with the permagum provided in the parts bag.

REFRIGERANT CONNECTIONS

Keep the coil connections sealed until refrigerant connections are to be made. See the Installation Instructions for the outdoor unit for details on line sizing, tubing installation, and charging information.


Install refrigerant tubing so that it does not block service access to the front of the unit.

Use a brazing shield to protect the cabinet's paint from being damaged by torch flames.

Coil is shipped with a low (5 - 10 PSIG) pressure charge of dry nitrogen. Evacuate the system before charging with R-22 refrigerant.

FIGURE 5
REFRIGERANT ACCESS PANEL

NOTE: WHEN CONVERTING TO HORIZONTAL RIGHT INSTALLATION, USE THE RIGHT-HAND SIDE MOUNTING HOLES IN THE REFRIGERANT ACCESS PANEL

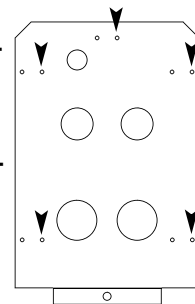

TXV SENSING BULB

IMPORTANT: Do not perform any soldering with the TXV bulb attached to the line.

After soldering operations have been completed, clamp the TXV bulb securely on the suction line at the 2 o'clock position with the strap provided in the parts bag.

Insulate the TXV sensing bulb and suction line with the provided pressure sensitive insulation (size 4" x 7") and secure with provided wire ties.

NOTE: TXV sensing bulb should be located on a horizontal section of suction line, just outside of coil box.

CONDENSATE DRAIN TUBING

Consult local codes or ordinances for specific requirements.

IMPORTANT: When making drain fitting connections to drain pan, use a thin layer of teflon paste, silicone or teflon tape and install hand tight.

IMPORTANT: When making drain fitting connections to drain pan, do not overtighten. Overtightening fittings can split pipe connections on drain pan.

FIGURE 6
VERTICAL BRACKET



FIGURE 8
AIR STOP
SCREWS

SCREW
REMOVAL

DRAIN
TROUGH
SCREW

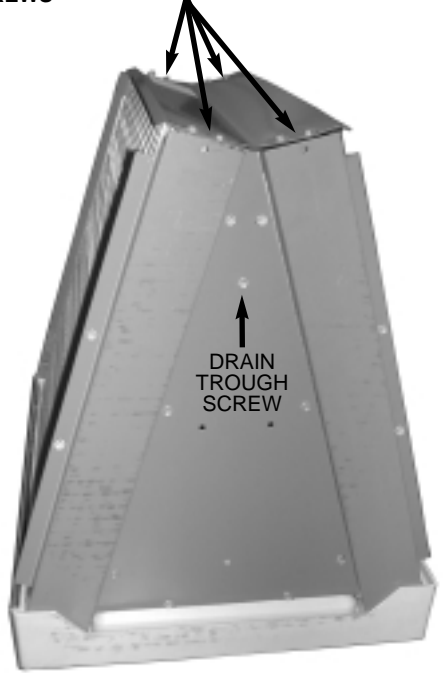


FIGURE 7
DRAIN PAN PLACEMENT

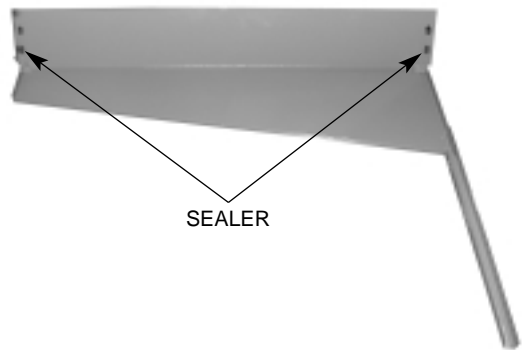


FIGURE 9
ROTATE DRAIN TROUGH




FIGURE 10
PERMAGUM APPLICATION

SEALER



IMPORTANT: If PVC condensate fittings are used, local codes may require that the fittings be shielded from radiant heat from the flue pipe. Install provided foil back insulation around condensate fittings and secure with foil tape provided in each bag.

- Do not reduce drain line size less than connection size provided on condensate drain pan.
- All drain lines must be pitched downward away from the unit a minimum of 1/8" per foot of line to ensure proper drainage.
- Do not connect condensate drain line to a closed or open sewer pipe. Run condensate to an open drain or outdoors.
- The drain line should be insulated where necessary to prevent sweating and damage due to condensate forming on the outside surface of the line.
- Make provisions for disconnecting and cleaning of the primary drain line should it become necessary. Install a 2 in. trap in the primary drain line as close to the unit as possible. Make sure that the top of the trap is below connection to the drain pan to allow complete drainage of pan (see Figure 11).
- Auxiliary drain if used should be run to a place where it will be noticeable if it becomes operational. Occupant should be warned that a problem exists if water should begin running from the auxiliary drain line.
- Test condensate drain pan and drain line after installation is complete. Pour several quarts of water into drain pan, enough to fill drain trap and line. Check to make sure drain pan is draining completely, no leaks are found in drain line fittings, and water is draining from the termination of the primary drain line.

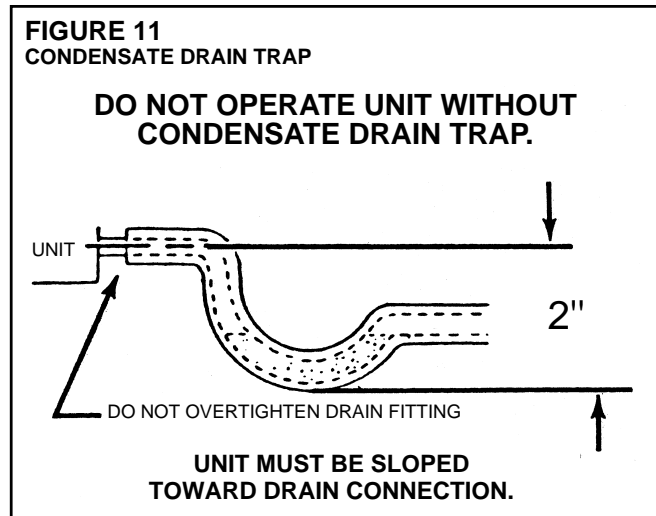

IV. MAINTENANCE

For continuing high performance and to minimize possible equipment failure, it is essential that periodic maintenance be performed on this equipment. Consult your local dealer as to the proper frequency of maintenance and the availability of a maintenance contract.

AIR FILTER

Check the system filter every ninety days or as often as found to be necessary and if obstructed, clean or replace at once.

IMPORTANT: DO NOT OPERATE THE SYSTEM WITHOUT A FILTER IN PLACE.

INDOOR COIL - DRAIN PAN - DRAIN LINE

Inspect the indoor coil once each year for cleanliness and clean as necessary. In some cases, it may be necessary to remove the filter and check the return side of the coil with a mirror and flashlight.

- Generally, the coil can be easily cleaned when it is dry. If the coil is coated with dirt or lint, blow compressed air or nitrogen through the supply air side of the coil fins blowing dirt or lint from the return air side of the coil onto the filter or cardboard placed between filter and coil. Be sure lint and dirt is removed from the filter and return air system.
- If the coil is coated with oil or grease, clean it with a mild automatic dishwasher detergent and water solution. Rinse the coil thoroughly with clear water. Be careful not to splash water excessively into unit and system.
- Inspect the drain pan and condensate drain at the same time the cooling coil is checked. Clean the drain pan and condensate drain by removing any foreign matter from the pan. Flush the pan and drain tube with clear water.
- If the drain tube is restricted, it can generally be cleaned with high pressure water. Remove the drain line from the unit away from the pan and coil to clear the drain line.

IMPORTANT: Do not use caustic household drain cleaners in the condensate pan or near the indoor coil. Drain cleaners will quickly damage the indoor coil.

V. ACCESSORIES

PLENUM ADAPTER ACCESSORY RXBA-AC

This plenum adapter accessory is for installation on cased indoor cooling and heat pump coils. This allows a nominal size cased coil to be installed on the next smaller size gas or oil furnace. **NOTE: This accessory is for installation on coil casings to fit gas or oil furnaces only - this accessory must not be used on electric furnaces or heat pump air handlers.** Consult the installation instructions packaged with the accessory for proper installation. The RXBA-AC (upflow) can be ordered factory installed by designation as "with adapters" in the coil model number.

PLENUM ADAPTER ACCESSORY RXBA-AE

This plenum adapter accessory is for use with the 24-1/2" wide cased indoor cooling and heat pump coils. This allows a 24-1/2" wide cased coil to be installed on a 28" wide oil furnace. This is a field installed accessory only.