



RSNJ

Parts List
18-July-2011



*This parts list is current as of the above revision date.
See <http://www.rheempartslists.net/92-42800-RSNJ.pdf> for the current revision.*

Package Air Conditioners

Table of Contents

Model Explanation	Page 3
Parts Numbers	
Panels - Miscellaneous 024-036	Page 4
Panels - Miscellaneous 042-048	Page 5
Panels - Miscellaneous 060	Page 6
Electrical Group	Page 7
Fan Group	Page 8
Blower Group	Page 9
Coil Parts	Page 10
Compressor Group	Page 11
Heater Kits	Page 12
Accessories	Page 12
Drawings/Photographs	
Exploded View	Page 13
Control Panel	Page 14
Blower Assembly	Page 15
Coil Assembly	Page 16
Notes/Disclaimer	Page 17

MODEL NUMBER EXPLANATION

R	S	N	J	-	A	0	2	4	J	K	000
(1)	(2)	(3)	(4)		(5)		(6)		(7)	(8)	(9)

- | | |
|--|---|
| <p>(1) TRADEBRAND IDENTIFICATION</p> <p>(2) PRODUCT CLASSIFICATION
S= PACKAGED AIR CONDITIONER</p> <p>(3) EFFIECIENCY DESIGNATION
N= 13 SEER</p> <p>(4) DESIGN SERIES
J= HORIZONTAL DISCHARGE</p> <p>(5) FUTURE TECHNICAL DESIGNATIONS</p> <p>(6) COOLING CAPACITY
024= 24,000 BTU/HR
030= 30,000 BTU/HR
036= 36,000 BTU/HR
042= 42,000 BTU/HR
048= 48,000 BTU/HR
060= 60,000 BTU/HR</p> | <p>(7) ELECTRICAL DESIGNATION
J= 208-230/1/60
C= 208-230/3/60</p> <p>(8) DRIVE DESIGNATION
K= DIRECT DRIVE</p> <p>(9) HEATING CAPACITY
000=NO RESISTANCE HEAT
005=05 KW RESISTANCE HEAT
007=07 KW RESISTANCE HEAT
010=010 KW RESISTANCE HEAT
015=015 KW RESISTANCE HEAT
020=020 KW RESISTANCE HEAT</p> |
|--|---|

SERIAL NUMBER EXPLANATION

7	1	6	6	F	2	7	0	4	9	9	9	9	9
(1)				(2)	(3)	(4)	(5)						

- (1) **COMPRESSOR IDENTIFICATION NUMBER**
- (2) **PRODUCTION LOCATION**
F = FORT SMITH, AR
- (3) **WEEK OF PRODUCTION**
- (4) **YEAR OF PRODUCTION**
- (5) **PRODUCTION NUMBER**

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY ELECTRICAL DESIGNATION	RSNJ A 024 J	RSNJ A 030 J	RSNJ A 036 C	RSNJ A 036 J
PANELS, MISCELLANEOUS PARTS						
1		Louver Panel	AE-100830-02	AE-100830-02	AE-100830-02	AE-100830-02
2		Corner Post	AE-100822-01	AE-100822-01	AE-100822-01	AE-100822-01
3		Front Post	AE-100821-01	AE-100821-01	AE-100821-01	AE-100821-01
4		Louver Panel	AE-100830-01	AE-100830-01	AE-100830-01	AE-100830-01
5		Insulation Retainer	AE-100831-02	AE-100831-02	AE-100831-02	AE-100831-02
6		Front Access Panel	AE-100823-01	AE-100823-01	AE-100823-01	AE-100823-01
7	Stk	Drainpan	68-100808-01	68-100808-01	68-100808-01	68-100808-01
8		Air Stop - Drainpan	AE-100825-01	AE-100825-01	AE-100825-01	AE-100825-01
9		Air Stop - Drainpan	AE-100825-02	AE-100825-02	AE-100825-02	AE-100825-02
10		Drainpan Tray	AE-100809-01	AE-100809-01	AE-100809-01	AE-100809-01
11		Control Access Panel	AE-100824-01	AE-100824-01	AE-100824-01	AE-100824-01
12		Control Panel Assembly	AS-100807-01	AS-100807-01	AS-100807-01	AS-100807-01
13		Base Rail (2) - Before F2208	AE-100803-02	AE-100803-02	AE-100803-02	AE-100803-02
13		Base Rail (2) - After F2208	AE-102792-01	AE-102792-01	AE-102792-01	AE-102792-01
14		Base Rail (2) - Before F2208	AE-100803-01	AE-100803-01	AE-100803-01	AE-100803-01
15		Base Pan	AE-100804-01	AE-100804-01	AE-100804-01	AE-100804-01
16		Right Panel Assembly	AS-100820-01	AS-100820-01	AS-100820-01	AS-100820-01
17		Blower Support	AE-100818-02	AE-100818-02	AE-100818-02	AE-100818-02
		Insulation Retainer (2)	AE-100831-01	AE-100831-01	AE-100831-01	AE-100831-01
		Duct Ring - 14 in.	58-100850-01	58-100850-01	58-100850-01	58-100850-01
18		Transition Bottom	AE-100815-01	AE-100815-01	AE-100815-01	AE-100815-01
19		Transition Top	AE-100815-02	AE-100815-02	AE-100815-02	AE-100815-02
20		Block Off Plate	AE-100816-01	AE-100816-01	AE-100816-01	AE-100816-01
21		Rear Panel Assembly	AS-100814-01	AS-100814-01	AS-100814-01	AS-100814-01
22		Rear Air Stop	AE-100810-01	AE-100810-01	AE-100810-01	AE-100810-01
23		Top Panel Assembly (Indoor)	AS-100828-01	AS-100828-01	AS-100828-01	AS-100828-01
24		Top Panel (Outdoor)	AE-100829-01	AE-100829-01	AE-100829-01	AE-100829-01
25		Grille	95-100833-01	95-100833-01	95-100833-01	95-100833-01
28		Blower Support	AE-100818-01	AE-100818-01	AE-100818-01	AE-100818-01
29		Bulkhead Cap Assembly	AS-100826-01	AS-100826-01	AS-100826-01	AS-100826-01
30		Bulkhead Assembly	AS-100812-01	AS-100812-01	AS-100812-01	AS-100812-01
37		Low Voltage Mount	AE-100839-01	AE-100839-01	AE-100839-01	AE-100839-01
38		Low Voltage Cover	AE-100839-02	AE-100839-02	AE-100839-02	AE-100839-02
43		Heater Kit Delete Plate (Mounted in Control Box)	AE-100842-01	AE-100842-01	AE-100842-01	AE-100842-01
49		Gaugeport Enclosure	AE-101352-01	AE-101352-01	AE-101352-01	AE-101352-01

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY ELECTRICAL DESIGNATION	RSNJ A 042 C	RSNJ A 042 J	RSNJ A 048 C	RSNJ A 048 J
PANELS, MISCELLANEOUS PARTS						
1		Louver Panel	AE-100830-02	AE-100830-02	AE-100830-04	AE-100830-04
2		Corner Post	AE-100822-01	AE-100822-01	AE-100822-02	AE-100822-02
3		Front Post	AE-100821-01	AE-100821-01	AE-100821-02	AE-100821-02
4		Louver Panel	AE-100830-01	AE-100830-01	AE-100830-03	AE-100830-03
5		Insulation Retainer	AE-100831-02	AE-100831-02	AE-100831-03	AE-100831-03
6		Front Access Panel	AE-100823-01	AE-100823-01	AE-100823-02	AE-100823-02
7	Stk	Drainpan	68-100808-01	68-100808-01	68-100808-01	68-100808-01
8		Air Stop - Drainpan	AE-100825-01	AE-100825-01	AE-100825-01	AE-100825-01
9		Air Stop - Drainpan	AE-100825-02	AE-100825-02	AE-100825-02	AE-100825-02
10		Drainpan Tray	AE-100809-01	AE-100809-01	AE-100809-01	AE-100809-01
11		Control Access Panel	AE-100824-01	AE-100824-01	AE-100824-02	AE-100824-02
12		Control Panel Assembly	AS-100807-01	AS-100807-01	AS-100807-02	AS-100807-02
13		Base Rail (2) - Before F2208	AE-100803-02	AE-100803-02	AE-100803-02	AE-100803-02
13		Base Rail (2) - After F2208	AE-102792-01	AE-102792-01	AE-102792-01	AE-102792-01
14		Base Rail (2) - Before F2208	AE-100803-01	AE-100803-01	AE-100803-01	AE-100803-01
15		Base Pan	AE-100804-01	AE-100804-01	AE-100804-01	AE-100804-01
16		Right Panel Assembly	AS-100820-01	AS-100820-01	AS-100820-02	AS-100820-02
17		Blower Support	AE-100818-02	AE-100818-02	AE-100818-02	AE-100818-02
		Insulation Retainer (2)	AE-100831-01	AE-100831-01	AE-100831-01	AE-100831-01
		Duct Ring - 14 in.	58-100850-01	58-100850-01	58-100850-01	58-100850-01
18		Transition Bottom	AE-100815-01	AE-100815-01	AE-100815-01	AE-100815-01
19		Transition Top	AE-100815-02	AE-100815-02	AE-100815-02	AE-100815-02
20		Block Off Plate	AE-100816-01	AE-100816-01	AE-100816-01	AE-100816-01
21		Rear Panel Assembly	AS-100814-01	AS-100814-01	AS-100814-02	AS-100814-02
22		Rear Air Stop	AE-100810-01	AE-100810-01	AE-100810-02	AE-100810-02
23		Top Panel Assembly (Indoor)	AS-100828-01	AS-100828-01	AS-100828-01	AS-100828-01
24		Top Panel (Outdoor)	AE-100829-01	AE-100829-01	AE-100829-01	AE-100829-01
25		Grille	95-100833-01	95-100833-01	95-100833-01	95-100833-01
28		Blower Support	AE-100818-01	AE-100818-01	AE-100818-01	AE-100818-01
29		Bulkhead Cap Assembly	AS-100826-01	AS-100826-01	AS-100826-01	AS-100826-01
30		Bulkhead Assembly	AS-100812-01	AS-100812-01	AS-100812-02	AS-100812-02
37		Low Voltage Mount	AE-100839-01	AE-100839-01	AE-100839-01	AE-100839-01
38		Low Voltage Cover	AE-100839-02	AE-100839-02	AE-100839-02	AE-100839-02
43		Heater Kit Delete Plate (Mounted in Control Box)	AE-100842-01	AE-100842-01	AE-100842-01	AE-100842-01
49		Gauge Port Enclosure	AE-101352-01	AE-101352-01	AE-101352-01	AE-101352-01

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY ELECTRICAL DESIGNATION	RSNJ A 060 C	RSNJ A 060 J
PANELS, MISCELLANEOUS PARTS				
1		Louver Panel	AE-100830-04	AE-100830-04
2		Corner Post	AE-100822-02	AE-100822-02
3		Front Post	AE-100821-02	AE-100821-02
4		Louver Panel	AE-100830-03	AE-100830-03
5		Insulation Retainer	AE-100831-03	AE-100831-03
6		Front Access Panel	AE-100823-02	AE-100823-02
7	Stk	Drainpan	68-100808-01	68-100808-01
8		Air Stop - Drainpan	AE-100825-01	AE-100825-01
9		Air Stop - Drainpan	AE-100825-02	AE-100825-02
10		Drainpan Tray	AE-100809-01	AE-100809-01
11		Control Access Panel	AE-100824-02	AE-100824-02
12		Control Panel Assembly	AS-100807-02	AS-100807-02
13		Base Rail (2) - Before F2208	AE-100803-02	AE-100803-02
13		Base Rail (2) - After F2208	AE-102792-01	AE-102792-01
14		Base Rail (2) - Before F2208	AE-100803-01	AE-100803-01
15		Base Pan	AE-100804-01	AE-100804-01
16		Right Panel Assembly	AS-100820-02	AS-100820-02
17		Blower Support	AE-100818-02	AE-100818-02
		Insulation Retainer (2)	AE-100831-01	AE-100831-01
		Duct Ring - 14 in.	58-100850-01	58-100850-01
18		Transition Bottom	AE-100815-01	AE-100815-01
19		Transition Top	AE-100815-02	AE-100815-02
20		Block Off Plate	AE-100816-01	AE-100816-01
21		Rear Panel Assembly	AS-100814-02	AS-100814-02
22		Rear Air Stop	AE-100810-02	AE-100810-02
23		Top Panel Assembly (Indoor)	AS-100828-01	AS-100828-01
24		Top Panel (Outdoor)	AE-100829-01	AE-100829-01
25		Grille	95-100833-01	95-100833-01
28		Blower Support	AE-100818-01	AE-100818-01
29		Bulkhead Cap Assembly	AS-100826-01	AS-100826-01
30		Bulkhead Assembly	AS-100812-02	AS-100812-02
37		Low Voltage Mount	AE-100839-01	AE-100839-01
38		Low Voltage Cover	AE-100839-02	AE-100839-02
43		Heater Kit Delete Plate (Mounted in Control Box)	AE-100842-01	AE-100842-01
49		Gauge Port Enclosure	AE-101352-01	AE-101352-01

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY ELECTRICAL DESIGNATION	RSNJ A 024 J	RSNJ A 030 J	RSNJ A 036 C	RSNJ A 036 J
ELECTRICAL GROUP						
CONTROL BOX COMPONENTS:						
39		Terminal Strip	45-23591-01	45-23591-01	45-23591-01	45-23591-01
40	Stk	Transformer	46-100836-01	46-100836-01	46-100836-01	46-100836-01
41	Stk	Blower Time Delay	47-23433-05	47-23433-05	47-23433-05	47-23433-05
42	Stk	Relay	42-101208-01	42-101208-01	42-101208-01	42-101208-01
44	Stk	Capacitor - Blower Motor	See Blower Group			
45		Capacitor Strap - Blower Motor Capacitor	AE-50892-01	AE-50892-01	AE-50892-01	AE-50892-01
46	Stk	Contactactor	42-42728-03	42-42728-03	42-22464-01	42-42728-03
47		Capacitor Strap - Compressor/Fan	AE-50892-56	AE-50892-56	AE-50892-01	AE-50892-56
48	Stk	Capacitor - Compressor/Fan	See Compressor Group			

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY ELECTRICAL DESIGNATION	RSNJ A 042 C	RSNJ A 042 J	RSNJ A 048 C	RSNJ A 048 J
ELECTRICAL GROUP						
CONTROL BOX COMPONENTS:						
39		Terminal Strip	45-23591-01	45-23591-01	45-23591-01	45-23591-01
40	Stk	Transformer	46-100836-01	46-100836-01	46-100836-01	46-100836-01
41	Stk	Blower Time Delay	47-23433-05	47-23433-05	47-23433-05	47-23433-05
42	Stk	Relay	42-101208-01	42-101208-01	42-101208-01	42-101208-01
44	Stk	Capacitor - Blower Motor	See Blower Group			
45		Capacitor Strap - Blower Motor Capacitor	AE-50892-01	AE-50892-01	AE-50892-01	AE-50892-01
46	Stk	Contactactor	42-22464-01	42-42728-03	42-22464-01	42-42728-03
47		Capacitor Strap - Compressor/Fan	AE-50892-01	AE-50892-56	AE-50892-01	AE-50892-56
48	Stk	Capacitor - Compressor/Fan	See Compressor Group			

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY ELECTRICAL DESIGNATION	RSNJ A 060 C	RSNJ A 060 J		
ELECTRICAL GROUP						
CONTROL BOX COMPONENTS:						
39		Terminal Strip	45-23591-01	45-23591-01		
40	Stk	Transformer	46-100836-01	46-100836-01		
41	Stk	Blower Time Delay	47-23433-05	47-23433-05		
42	Stk	Relay	42-101208-01	42-101208-01		
44	Stk	Capacitor - Blower Motor	See Blower Group			
45		Capacitor Strap - Blower Motor Capacitor	AE-50892-01	AE-50892-01		
46	Stk	Contactactor	42-22464-01	42-42478-02		
47		Capacitor Strap - Compressor/Fan	AE-50892-01	AE-50892-56		
48	Stk	Capacitor - Compressor/Fan	See Compressor Group			

No.	Notes	MODEL	RSNJ	RSNJ	RSNJ	RSNJ
		TECHNICAL VARIATION	A	A	A	A
		COOLING CAPACITY	024	030	036	036
		ELECTRICAL DESIGNATION	J	J	C	J
FAN GROUP						
The fan and motor part numbers below may be different than originally supplied on the equipment. This fan and motor combination was changed to enhance the sound characteristics of the unit. Fan blade should be positioned on the shaft such that the highest point on the blade is two inches below the uppermost point on the motor housing, while allowing a minimum of 1/8 inch clearance between the motor and fan. CAUTION: When replacing either the fan or the motor, both components must be matched in the combination shown below. In order to ensure correct performance, do not change only one component only without verifying that the combination is correct.						
26	Stk	Fan Motor	51-100998-24	51-100998-24	51-100998-24	51-100998-24
27	Stk	Fan Blade	70-100580-08	70-100580-08	70-100580-08	70-100580-08
48		Capacitor - Fan Motor	See Compressor Group			

No.	Notes	MODEL	RSNJ	RSNJ	RSNJ	RSNJ
		TECHNICAL VARIATION	A	A	A	A
		COOLING CAPACITY	042	042	048	048
		ELECTRICAL DESIGNATION	C	J	C	J
FAN GROUP						
The fan and motor part numbers below may be different than originally supplied on the equipment. This fan and motor combination was changed to enhance the sound characteristics of the unit. Fan blade should be positioned on the shaft such that the highest point on the blade is two inches below the uppermost point on the motor housing, while allowing a minimum of 1/8 inch clearance between the motor and fan. CAUTION: When replacing either the fan or the motor, both components must be matched in the combination shown below. In order to ensure correct performance, do not change only one component only without verifying that the combination is correct.						
26	Stk	Fan Motor	51-100998-24	51-100998-24	51-100998-25	51-100998-25
27	Stk	Fan Blade	70-100580-08	70-100580-08	70-102345-01	70-102345-01
48		Capacitor - Fan Motor	See Compressor Group			
Note: The fan blade listed below is of a new design to further enhance sound characteristics and may be substituted for the above fan where applicable.						
27	Stk	Fan Blade	N/A	N/A	70-100580-09	70-100580-09

No.	Notes	MODEL	RSNJ	RSNJ		
		TECHNICAL VARIATION	A	A		
		COOLING CAPACITY	060	060		
		ELECTRICAL DESIGNATION	C	J		
FAN GROUP						
The fan and motor part numbers below may be different than originally supplied on the equipment. This fan and motor combination was changed to enhance the sound characteristics of the unit. Fan blade should be positioned on the shaft such that the highest point on the blade is two inches below the uppermost point on the motor housing, while allowing a minimum of 1/8 inch clearance between the motor and fan. CAUTION: When replacing either the fan or the motor, both components must be matched in the combination shown below. In order to ensure correct performance, do not change only one component only without verifying that the combination is correct.						
26	Stk	Fan Motor	51-100998-25	51-100998-25		
27	Stk	Fan Blade	70-102345-01	70-102345-01		
48		Capacitor - Fan Motor	See Compressor Group			
Note: The fan blade listed below is of a new design to further enhance sound characteristics and may be substituted for the above fan where applicable.						
27	Stk	Fan Blade	70-100580-09	70-100580-09		

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY ELECTRICAL DESIGNATION	RSNJ A 024 J	RSNJ A 030 J	RSNJ A 036 C	RSNJ A 036 J
BLOWER GROUP						
	Stk	Blower Assembly	AS-100841-01	AS-100841-02	AS-100841-03	AS-100841-03
51		Blower Housing w/Wheel	70-100840-01	70-100840-01	70-100840-01	70-100840-01
	Stk	Blower Wheel	703017	703017	703017	703017
52		Motor Band	70-19927-03	70-19927-03	70-19927-03	70-19927-03
53		Blower Arm Assembly (3)	70-19929-09	70-19929-09	70-19929-09	70-19929-09
54	Stk	Blower Motor	51-100837-01	51-100837-02	51-100837-03	51-100837-03
44	Stk	Capacitor - Blower Motor	43-100497-09	43-100497-10	43-100497-46	43-100497-46

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY ELECTRICAL DESIGNATION	RSNJ A 042 C	RSNJ A 042 J	RSNJ A 048 C	RSNJ A 048 J
BLOWER GROUP						
	Stk	Blower Assembly	AS-100841-04	AS-100841-04	AS-100841-05	AS-100841-05
51		Blower Housing w/Wheel	70-100840-02	70-100840-02	70-100840-02	70-100840-02
	Stk	Blower Wheel	703016	703016	703016	703016
52		Motor Band	70-19927-03	70-19927-03	70-19927-03	70-19927-03
53		Blower Arm Assembly (3)	70-19929-09	70-19929-09	70-19929-09	70-19929-09
54	Stk	Blower Motor	51-100837-04	51-100837-04	51-100837-05	51-100837-05
44	Stk	Capacitor - Blower Motor	43-100497-42	43-100497-42	43-100497-42	43-100497-42

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY ELECTRICAL DESIGNATION	RSNJ A 060 C	RSNJ A 060 J		
BLOWER GROUP						
	Stk	Blower Assembly	AS-100841-06	AS-100841-06		
51		Blower Housing w/Wheel	70-100840-02	70-100840-02		
	Stk	Blower Wheel	703016	703016		
52		Motor Band	70-19927-03	70-19927-03		
53		Blower Arm Assembly (3)	70-19929-09	70-19929-09		
54	Stk	Blower Motor	51-100837-06	51-100837-06		
44	Stk	Capacitor - Blower Motor	43-100497-49	43-100497-49		

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY	RSNJ A 024	RSNJ A 030	RSNJ A 036	RSNJ A 042
COIL GROUP						
CONDENSER COIL:						
32	Stk	Condenser Coil (Outdoor Coil)	AS-100793-05	AS-100793-05	AS-100793-07	AS-100793-07
EVAPORATOR COIL:						
33	Stk	Evaporator Coil (Indoor Coil)	AS-100792-06	AS-100792-07	AS-100792-08	AS-100792-09
7		Drain Pan - Evaporator Coil	See Panels - Miscellaneous			
34		Bulb Strainer	83-26020-02	83-26020-02	83-26020-02	83-26020-02
35	Stk	TXV	61-101351-01	61-101351-02	61-101351-03	61-101351-04
		TXV Bulb Strap Kit	64-101357-01	64-101357-01	64-101357-01	64-101357-01
36		Draintrap Assembly	68-100846-01	68-100846-01	68-100846-01	68-100846-01
REFRIGERATION GROUP:						
50		Gaugeport Manifold - Valve Body (2)	61-22369-04	61-22369-04	61-22369-04	61-22369-04
50		Gaugeport Manifold - Valve Core (2)	61-18551-01	61-18551-01	61-18551-01	61-18551-01

No.	Notes	MODEL TECHNICAL VARIATION COOLING CAPACITY	RSNJ A 048	RSNJ A 060		
COIL GROUP						
CONDENSER COIL:						
32	Stk	Condenser Coil (Outdoor Coil)	AS-100793-08	AS-100793-09		
EVAPORATOR COIL:						
33	Stk	Evaporator Coil (Indoor Coil)	AS-100792-12	AS-100792-13		
7		Drain Pan - Evaporator Coil	See Panels - Miscellaneous			
34		Bulb Strainer	83-26020-02	83-26020-02		
35	Stk	TXV	61-101351-07	61-101351-06		
		TXV Bulb Strap Kit	64-101357-01	64-101357-01		
36		Draintrap Assembly	68-100846-01	68-100846-01		
REFRIGERATION GROUP:						
50		Gaugeport Manifold - Valve Body (2)	61-22369-04	61-22369-04		
50		Gaugeport Manifold - Valve Core (2)	61-18551-01	61-18551-01		

No.	Notes	MODEL	RSNJ	RSNJ	RSNJ	RSNJ
		TECHNICAL VARIATION				
		COOLING CAPACITY	A	A	A	A
		ELECTRICAL DESIGNATION	024	030	036	036
			J	J	C	J
COMPRESSOR GROUP						
		Compressor ID:	7208	7210	7216	7212
31	Stk	Compressor	55-100835-07S	55-100835-17S	55-100835-20S	55-100835-14S
48	Stk	Run Capacitor - Fan/Compressor	43-101665-44	43-26271-41	43-100497-03	43-26271-41
55	Stk	Compressor Wiring Harness (Molded Plug)	45-100834-80	45-100834-80	45-100834-80	45-100834-80
		Compressor ID:	7209	7211		
31	Stk	Compressor	55-100835-13S	55-100835-16S		
48	Stk	Run Capacitor - Fan/Compressor	43-26261-44	43-26271-09		
55	Stk	Compressor Wiring Harness (Molded Plug)	45-100834-80	45-100834-80		

No.	Notes	MODEL	RSNJ	RSNJ	RSNJ	RSNJ
		TECHNICAL VARIATION				
		COOLING CAPACITY	A	A	A	A
		ELECTRICAL DESIGNATION	042	042	048	048
			C	J	C	J
COMPRESSOR GROUP						
		Compressor ID:	7217	7213	7218	7214
31	Stk	Compressor	55-100835-21S	55-100835-15S	55-100835-22S	55-100835-04S
48	Stk	Run Capacitor - Fan/Compressor	43-100497-03	43-26261-15	43-100497-09	43-26271-38
55	Stk	Compressor Wiring Harness (Molded Plug)	45-100834-80	45-100834-80	45-100834-80	45-100834-80

No.	Notes	MODEL	RSNJ	RSNJ		
		TECHNICAL VARIATION				
		COOLING CAPACITY	A	A		
		ELECTRICAL DESIGNATION	060	060		
			C	J		
COMPRESSOR GROUP						
		Compressor ID:	7219	7215		
31	Stk	Compressor	55-100835-19S	55-100835-18S		
48	Stk	Run Capacitor - Fan/Compressor	43-100497-09	43-26271-30		
55	Stk	Compressor Wiring Harness (Molded Plug)	45-100834-80	45-100834-80		

No.	Notes	MODEL	RSNJ	RSNJ	RSNJ	RSNJ
		TECHNICAL VARIATION	A	A	A	A
		COOLING CAPACITY	024	030	036	036
		ELECTRICAL DESIGNATION	J	J	C	J
HEATER KITS						
		Heater Kit (5 kW)	RXQJ-C05J	RXQJ-C05J	N/A	RXQJ-C05J
		Heater Kit (7 kW)	RXQJ-C07J	RXQJ-C07J	N/A	RXQJ-C07J
		Heater Kit (10 kW)	RXQJ-C10J	RXQJ-C10J	RXQJ-C10C	RXQJ-C10J
		Heater Kit (15 kW)	N/A	RXQJ-C15J	RXQJ-C15C	RXQJ-C15J
		Heater Kit (20 kW)	N/A	N/A	N/A	N/A
No.	Notes	MODEL	RSNJ	RSNJ	RSNJ	RSNJ
		TECHNICAL VARIATION	A	A	A	A
		COOLING CAPACITY	042	042	048	048
		ELECTRICAL DESIGNATION	C	J	C	J
HEATER KITS						
		Heater Kit (5 kW)	N/A	RXQJ-C05J	N/A	RXQJ-C05J
		Heater Kit (7 kW)	N/A	RXQJ-C07J	N/A	RXQJ-C07J
		Heater Kit (10 kW)	RXQJ-C10C	RXQJ-C10J	RXQJ-C10C	RXQJ-C10J
		Heater Kit (15 kW)	RXQJ-C15C	RXQJ-C15J	RXQJ-C15C	RXQJ-C15J
		Heater Kit (20 kW)	RXQJ-C20C	RXQJ-C20J	RXQJ-C20C	RXQJ-C20J
No.	Notes	MODEL	RSNJ	RSNJ		
		TECHNICAL VARIATION	A	A		
		COOLING CAPACITY	060	060		
		ELECTRICAL DESIGNATION	C	J		
HEATER KITS						
		Heater Kit (5 kW)	N/A	RXQJ-C05J		
		Heater Kit (7 kW)	N/A	RXQJ-C07J		
		Heater Kit (10 kW)	RXQJ-C10C	RXQJ-C10J		
		Heater Kit (15 kW)	RXQJ-C15C	RXQJ-C15J		
		Heater Kit (20 kW)	RXQJ-C20C	RXQJ-C20J		
No.	Notes	MODEL	RSNJ			
		TECHNICAL VARIATION	A			
		COOLING CAPACITY	ALL			
AACCESSORIES						
		Outdoor Thermostat	RXPT-A01			

Exploded View

Control Panel

Blower Assembly

Coil Assembly

NOTES

Stk It is recommended that stock be maintained for this part.
N/A Not Applicable

DISCLAIMER: This document is intended to provide general replacement parts information to aid qualified service personnel in the repair of these models. The complete Model and Serial Number of the unit under repair should be specified when selecting and ordering replacement parts. Specifications and illustrations are subject to change without notice. Document 92-42800-RSNJ supersedes all previous parts lists for these models. See <http://www.rheempartslists.net/92-42800-RSNJ> for the latest revision of this document. The manufacturer assumes no obligation for errors or omissions. Service personnel must verify the proper and safe operation of equipment after the replacement of any original components.