INSTALLATION INSTRUCTIONS LOUVER PANEL 6.0, 7.5, 8.5, 10 AND 12.5 TON ROOFTOP AND PACKAGE A/C

A WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUST-MENT, AND OPERATION OF THIS KIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION, ADJUSTMENT, OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH.

PARTS LIST		
Part Description	Part Number	Quantity
Louver Panel Assembly – Standard Coil	AS-90789-01	1
Louver Panel Assembly – MicroChannel Coil	AS-90789-03	1
Mounting Screws	63-42109-03	8

A WARNING

BEFORE BEGINNING ANY MODIFICATION, BE SURE MAIN DISCONNECT SWITCH IS IN THE "OFF" POSITION. FAIL-URE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH. TAG DISCONNECT WITH A SUITABLE WARNING LABEL.

I. LOUVER PANEL INSTALLATION PROCEDURE

- 1. Remove louver panel from box.
- Install the louver panel on the front of the unit. Insert eight screws into the appropriate holes on the louver panel, see Illustration.

