

INSTALLATION INSTRUCTIONS

LOUVER PANELS

7-1/2 & 10 TON R410A HEAT PUMP (-)XRX-AAD01H & (-)XRX-AAD01J

 Recognize this symbol as an indication of Important Safety Information!

WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS KIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION, ADJUSTMENT, OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

WARNING

BEFORE BEGINNING ANY MODIFICATION, BE SURE MAIN DISCONNECT SWITCH IS IN THE "OFF" POSITION. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH. TAG DISCONNECT WITH A SUITABLE WARNING LABEL.

1. Louver Panel Installation

- a. Remove louver panels from box.
- b. Slide louvers up under the top panel in the locations shown on illustration.
- c. Secure panels with two screws at the top and bottom of each panel.

FIGURE 1
LOUVER PANEL INSTALLATION

