


Installation Instructions

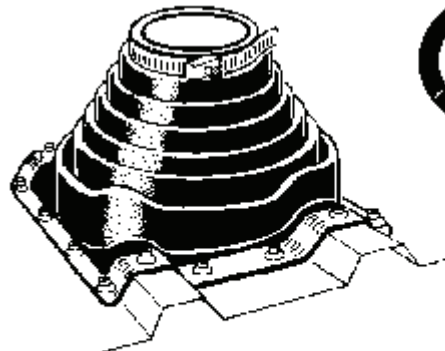

STEP 1

Select sizing . When opening is at bottom of boot size - Go to next smaller size boot.




STEP 2

SELECT AND TRIM ... Choose appropriate Deck-Mate with opening at least 20% smaller than pipe diameter. If necessary trim opening to 20% smaller than pipe diameter.



STEP 3

Slide Deck-Mate down over pipe (A non-petroleum based lubricant will ease installation).

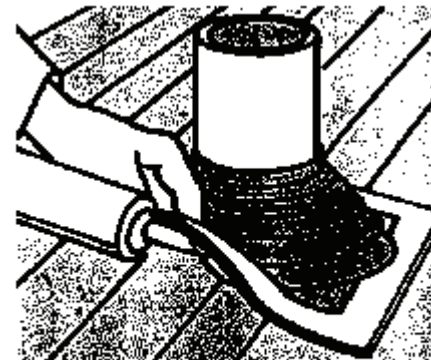


STEP 4

Apply sealant between base and roof membrane.



STEP 5

Press Deck-Mate down, bending it to conform to roof profile or roof irregularities. A blunt tool will help press flashing into tight roof angles.

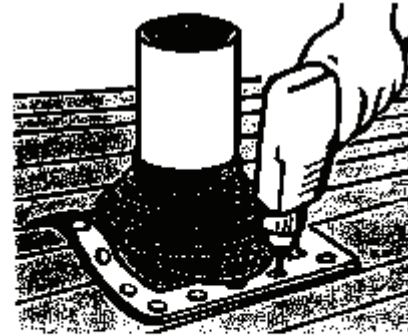

STEP 6

Use fasteners to complete sealing. For UPC installation, fastener spacing may not exceed 1.5" (38mm). Tighten stainless clamp at penetration.

PORTALS PLUS 815 Kimberly Drive, Carol Stream, IL 60188

TEL: (800) 624-8642 FAX: (866) 466-9335

All information is subject to change without notice. Dimensions and specifications shown are within manufacturing tolerances.

© Copyright Commercial Products Group of Hart & Cooley, Inc., January, 2008. All Rights Reserved.